 




# Power Sander

## User Manual

Model: 119868



## **1. PRODUCT DESCRIPTION**

The machine is designed for sanding drywalls, ceilings and walls of the inner and outer surfaces, clearing the floor residues, paint coatings, adhesive and loose plaster etc.

Our machine is not suitable for processing the object containing asbestos.



You must abide by certain safety precautions when using the equipment. In order to prevent injuries and damages from occurring, you must read through this operating manual carefully.

This manual must be kept in a safe place so that the information that it contains is always available. This operating manual must accompany the equipment if it is transferred to somebody else.

We do not accept any liability for accidents or damage arising from ignoring this manual and the safety instructions.

## **2. SPECIFICATIONS**

Model No.	<b>119868 R7233A-G</b>
Power	600W
Speed	600-1500 rpm
Grinding pad diameter	215mm
Sandpaper diameter	225mm
Tube diameter	32mm
Short-length (Without additional tube)	1.15m
Long Length (With additional tube)	1.65m
Short-weight	3.9 kg
Long Weight	4.2 kg
Protection class	<b>II/II</b>

### **3. SAFETY INSTRUCTIONS**

The following pictograms appear throughout these operating instructions:



*Indicates danger of injury, risk to life and possible damage to the appliance, if these instructions are not followed.*



*Indicates the presence of electric shocks.*

Read through these operating instructions carefully before using the appliance. Become familiar with the functions and method of operation. To ensure proper operation, always maintain the appliance according to the instructions. The operating instructions and associated documents should always be kept close to the appliance.

When using power tools, you must observe the following basic safety precautions in order to ensure protection from electric shocks, injury and fire. Read and follow all the instructions before using this power tool. Look after the notes on safety.



*Always check if your mains voltage corresponds with the value on the type plate*



The machine has been double-insulated in accordance with EN60745: therefore, an earth wire is not necessary

**USE CORRECT SUPPLY VOLTAGE:** The power supply voltage must match the information quoted on the tools identification plate.

**USE OF AN EXTENSION CORD:** Only use an approved tested and tagged extension lead that is suitable for the machine's power. The cord must have a diameter of at least 1.5mm<sup>2</sup>. When the extension cable is on a reel, unroll the cable in its entirety.

**SWITCH OFF THE MACHINE IMMEDIATELY IN CASE OF:**

1. Malfunction in the mains plug, power cable or damaging of cable.
2. Broken switch.
3. Smoke or stench of scorched insulation.

### **4. GENERAL SAFETY RULES**



**WARNING! Read all safety warnings and all instructions.** *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

**1) Work area safety**

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

## 2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

## 3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of distraction while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** *Loose clothes, jewelry or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*

## 4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*

## 5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

## **5. PRECAUTION ON USING DRYWALL SANDER**

**Attention!** You must abide by the following basic safety measures against electrical shocks, injuries and the danger of fire when using electric tools. Read and abide by these instructions before you start to use any tools.

These instructions must be kept in a safe place.

- The equipment must never be used in surroundings where an explosive atmosphere exists.
- Do not let the cable touch any parts of your body.
- Only use the extension cable approved for use in the working area.
- Don't force the machine for unsuitable work, e.g. rough grinding, brushing, etc., otherwise, danger and harm may be caused.
- Only use identical replacement parts when servicing, otherwise, risk-free operation can't be guaranteed.
- The accessories' allowed speed must be at least the same as the maximum speed of the machine; otherwise, they may be broken or cracked when their running speed is over the machine's allowed speed.
- Do not use damaged accessories. Before use, always check whether the accessories are nicked or cracked, e.g. to grinding pad, so please check the support plate is not cracked. Ensure everybody is out of the machine's rotation area and run the machine at max. speed for one minute, which will adequately test the accessories.
- Do not put the machine down when it hasn't stopped completely, otherwise you will lose control of the machine.
- Clean the exhaust port on your machine regularly.
- When working, control the machine firmly with both hands to ensure safe operation.
- When sanding, do not use sandpaper bigger than specified. When choosing grinding disc, please observe the manufacturer's specifications. Sandpaper beyond the grinding block leads to risk of injury causing cuts.
- The machine can only be connected to one extension lead at a time.
- We recommend that you always wear industrial safety gloves and safety goggles when working with the drywall sander.
- Wearing close-fitting clothes is mandatory.
- Always allow for reaction torque
- Wear TradeMark Protection Dust Mask P2 to protect you from hazardous dusts

## 6. HOW TO USE DRYWALL SANDER



*Before setting up for the repair or maintenance of the appliance, you must always turn off the operating switch and pull out of the mains plug!*

### Before Initial Operation

- Check if the rated frequency of the mains supply corresponds to the details of the type plate.
- Before using the tool, read the instruction book carefully.

### 6.0 How to assembly

 
Close the handles according to pic [0-1]

Press the lock wrench to the right position. [0-2]



### 6.1 How to Operate in Narrow Area


- Loosen the screw nut [1-1] by turning to the left and then insert the protection stand [1-2] in the screw nut;

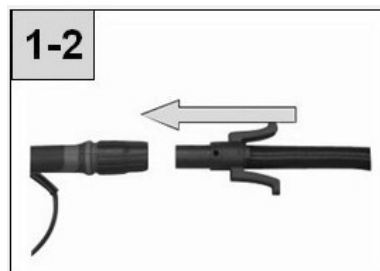

- Tighten the nut [1-3] by turning it to the right;



 The machine is connected with a protecting joint and suction control ring, protecting the hose from being crushed by machine and maintaining the ability of dust suction [1-4];

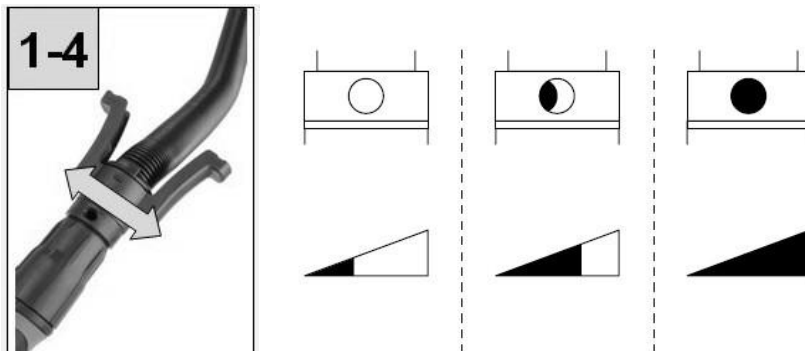

Strip the machine by the opposite actions.


**Attention:** There is lock  and unlock  mark on the handle to guide the user how to loosen and tighten the screw nut;

## 6.2 How to Operate in a Wide Area

 - Loosen the screw nut [1-1];



- Insert the additional handle [1-5] to the machine handle, realizing the machine's adjustable length to 1.65m in max.

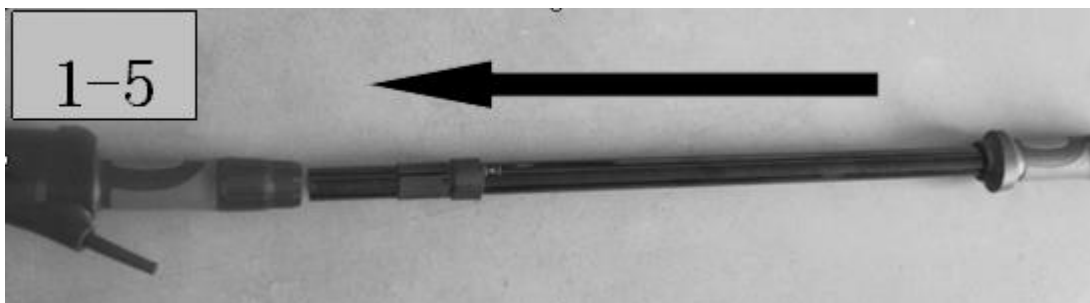


- Tighten the screw nut by turning it to the right [1-6];

The extended handle must be assembled to the right position; otherwise the machine will be destroyed.



 - Connect the protection stand and hose [1-2] the same as installation in narrow area;

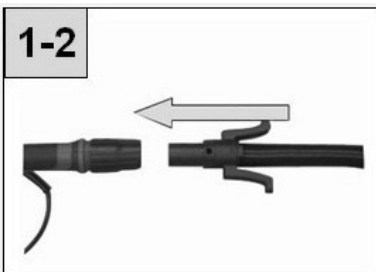


Strip the machine by the opposite actions.

**Attention:** There is lock  and unlock  mark on the handle to guide the user how to loosen and tighten the screw nut;

### 6.3 Electronic Control

 This machine has the characteristics as per below:

- On/Off Switch with soft start [1-7], ensuring machine starts smoothly without excess vibration.

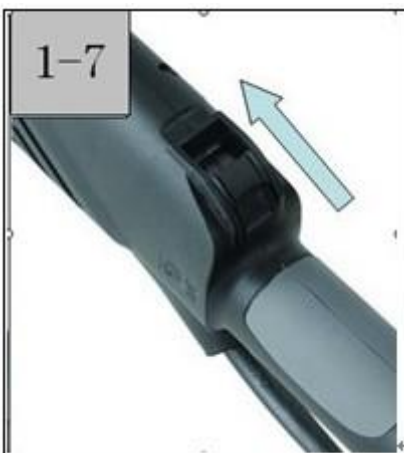



- Adjustable Speed [1-8]

Adjust the speed from 600-1500rpm by turning the speed wheel [1-8]. In this way, the user can choose different speeds for different sanding surfaces.



### 6.3 Replace Velcro Pad 【1-9】

- Insert the hex wrench (size 5) into the hexagonal screw bolt on the sanding pad
- Hold the sanding pad firmly, and then turn the wrench to dismount the pad.
- Install new Velcro pad by tightening the bolt



**Attention:** Only install the specified velcro pad on the machine.

 
**In order to ensure optimal performance, the machine should be run at a slightly lower speed for several minutes to make the grinding pad fit the sealing surface perfectly. During this process, the white foam particles will come out from the grinding head. However, this won't damage the machine.**

### 6.4 Stick the sanding paper to the pad

Please ensure the holes on the sanding paper to fit the holes on the pad accurately.

### 6.5 Two options for extracting dust 【1-10】

There are internal extraction and external extraction for dust particles. The 8-hole internal extraction system collects fine dust particles, enabling the machine to adhere to wall and ceiling, maximizing the dust extraction.

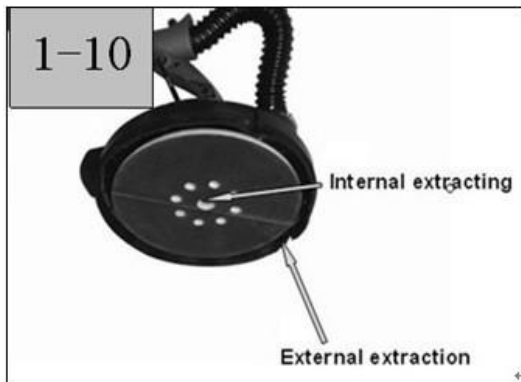

### 6.6 Use of Hose and Cord Clip 【1-11】

Clip the bigger ring of the clip to the hose and the smaller clip to the power cord. This is to make the movement around a room easier.



### 6.7 Adjusting of suction function 【1-12】

Turn the adjusting knob on the side of dust collection cover as the mark points, to adjust the suction function.



### 6.8 Connect to Vacuum Cleaner

Inhalation of dust is hazardous to health! When carrying out the work which can produce dust, please always wear a dust mask.

- Loosen the screw nut and then connect the protection stand and hose to the machine handle (see pic.1-1 and 1-2 for reference);
- Lock the screw nut; (see pic.1-3 for reference)
- Connect the other end of the hose to the vacuum cleaner;

## 7. Operate the Machine

- Do not control the machine's head.
- Hold the machine with both hands.
- Before operating the machine, make sure every fastening handle is closed.
- Connect the machine to the main power supply.
- Before switching on the machine, keep the sanding head slightly away from the work surface.
- Start the machine for necessary sanding work.
- Operate the machine with short length in narrow and awkward area.
- Run the machine with medium length for higher walls.
- Use the machine with longest length for ceilings.
- Do not over-press machine so as to avoid overloading! Press with proper pressure for better grinding effects. Good grinding effects and quality are mainly decided by choosing the right abrasive material.
- Once finishing the sanding task, switch off the machine.

## **8. CARE AND MAINTENANCE**



*Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.*

*Your power tool requires no additional lubrication or maintenance. Always store your power tool in a dry place.*

*If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.*

*If a fault cannot be rectified, return the sander to an authorized dealer for repair.*

### **Cleaning**

- Keep the safety devices, ventilation slots and motor housing as free of dirt and dust as possible.
- Clean the unit by rubbing it with a clean cloth or blow it clean using low-pressure compressed air.
- We recommend that you always clean the unit immediately after using it.
- Clean the unit regularly by rubbing it with a damp cloth and a little soft soap. Do not use cleaners or solvents; these will attack the plastic parts in the unit. You must also ensure that water cannot get into the inside of the unit.

### **Carbon brushes**

- If excessive sparking occurs you must have the carbon brushes checked by a qualified electrician.
- Attention! Only a qualified electrician is allowed to change the brushes.

## **9. TROUBLE SHOOTING**

(1) The operating switch is switched on, but the motor is not working.

- Wires in the mains plug or in the socket are loose.  
*Have socket and plug checked or repaired.*
- The switch is faulty.  
*Have the switch replaced.*

(2) The operating switch is switched on, but unusual noises can be heard, the motor is not working or only very slowly.

- Switch contact has failed.  
*Have the switch replaced.*
- Component jammed.  
*Have the electric tool checked or repaired.*
- Too much thrust, as a result the motor is dragging.  
*Use less thrust during the task.*

(3) Motor gets hot.





- Foreign substances have got inside the motor.  
*Have the foreign substances removed.*
- Lack of or contaminated lubrication grease.  
*Have lubricating grease applied or replaced.*
- Pressure too high  
*Use less thrust during the task*

(4) Frequent or strong sparks from the commutator.

- Short circuit on the armature.  
*Have the armature replaced.*
- Carbon brushes worn out or jammed  
*Have the carbon brushes checked.*
- Rough running of the commutator.  
*Have the surface of the commutator cleaned or ground.*

For your own safety, never remove parts or accessories of the electric tool during operation. In case of fault or damage have the electric tool repaired only by a specialist workshop or by the manufacturer.

#### **10. LABELS ON YOUR TOOL (if any)**

<b>V</b>	Volts	<b>Hz</b>	Hertz
~	Alternating current	<b>W</b>	Watts
<b>n<sub>0</sub></b>	No load speed	<b>/min or min<sup>-1</sup></b>	Revolutions or reciprocation per minute
	Class II tool		To reduce the risk of injury, user must read instruction manual
	Wear Ear Protection		Wear Eye Protection



**For your personal safety, READ and UNDERSTAND before using.  
Save This Instruction For Future Reference**



**Always Wear Ear Protection With This Tool**



**Always Wear Eye Protection With This Tool**



**Always Wear a breathing Mask With This Tool**

#### **11. ENVIRONMENTAL PROTECTION**



Do not dispose of in general household waste. Instead dispose of in an environmental way, contact your local recycling centre or council for advice. Please take the care of the environment.